


# 20° Ladder mounted to MPDs


Connectors are inserted from the bottom. Use fulls, halves or quarters for mids, sides or corners.

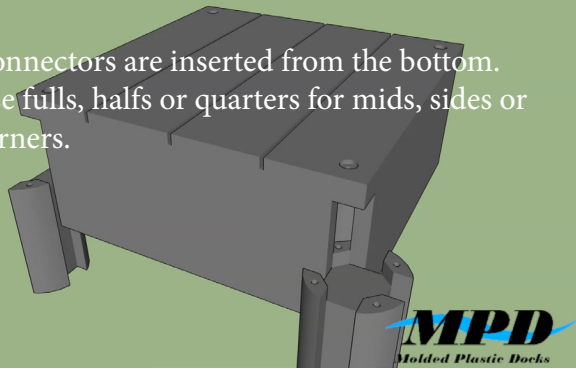


Stainless bolts with washer and thread lock lube are used to secure connectors.




Pieces can be assembled into rows.

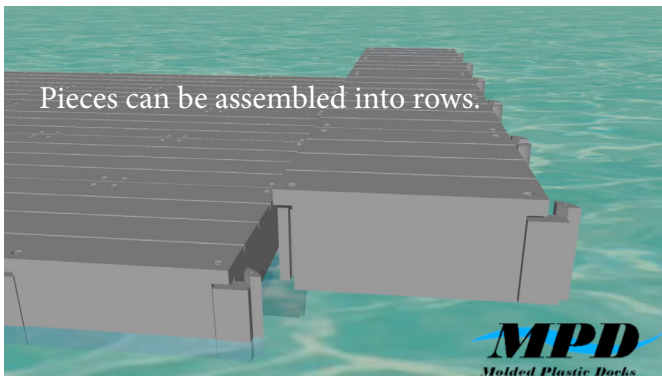


Rows can be joined into groups/docks.

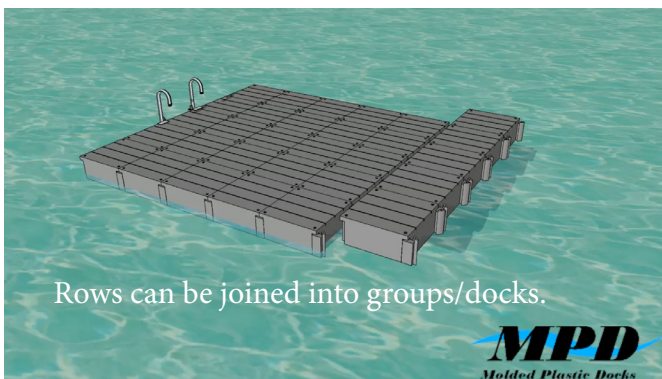


The 20° ladder can be mounted on the seems. Use outside bolt holes first.

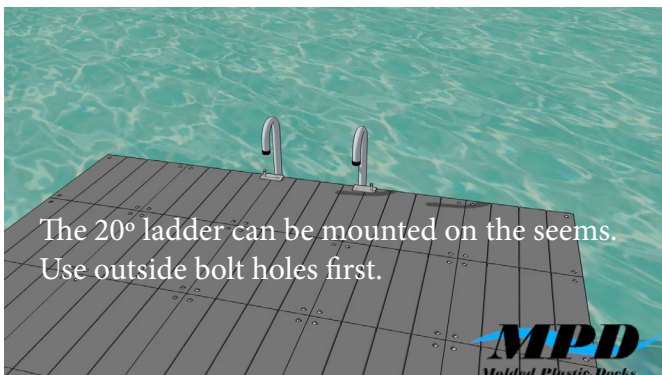


Assemble the ladder in the Swung up position with washers inside, outside and in between the handles.

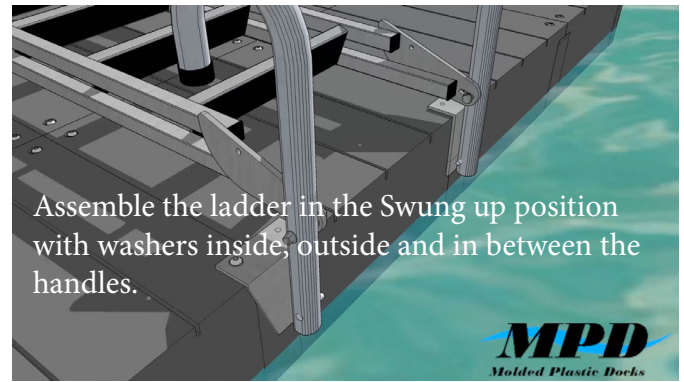

Pull back the spring pins and offset the pins in the holes to hold them clear from the ladder.

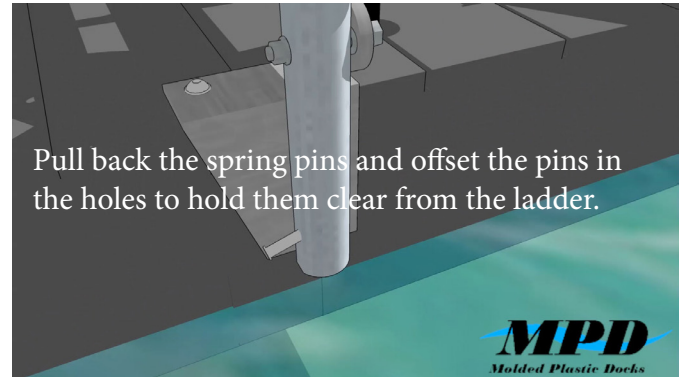

Swing the ladder down into the water.

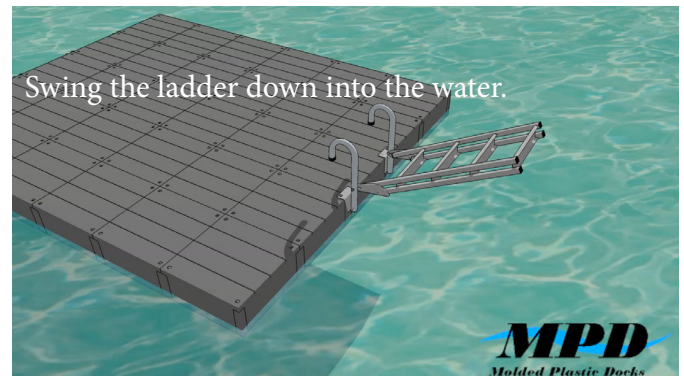

Release the spring pins to secure the ladder.



Finally, install the final two bolts with washers and thread lock lube on the inside holes of the ladder handles.

